

WIREPAS RANGE LOCATION 2.X.X – USER GUIDE



Table of contents

| | | |
|----|---|----|
| 1 | GENERAL INFORMATION ON MESH NETWORKS | 2 |
| 2 | BLUE ID MESH BEACONS | 4 |
| 3 | BLUE ID MESH GATEWAY | 5 |
| 4 | BLUE ID MESH OPERATION | 6 |
| 5 | MOBILE BEACON OPERATING MODES | 7 |
| 6 | CONFIGURATION VIA NFC | 9 |
| 7 | COMMANDS VIA THE NETWORK: APPLICATION CONFIGURATION DATA | 16 |
| 8 | CONFIGURATION OVER THE NETWORK: MQTT TOPIC | 20 |
| 9 | VIEWING TOOLS | 22 |
| 10 | HARDWARE SPECIFICATIONS | 23 |
| 11 | SALES REFERENCES | 24 |
| 12 | STANDARDS AND CERTIFICATIONS | 25 |
| 13 | ANNEX | 26 |

1 GENERAL INFORMATION ON MESH NETWORKS

Mesh networks

A mesh network is a network topology (wired or wireless) in which all hosts are connected “peer-to-peer” without a centralized hierarchy, thus creating a net-type structure. With this architecture, every node can send, receive, and relay data. This eliminates the presence of “backbone” points that can isolate parts of the network in case

of malfunction. If a host stops working, data simply takes another route to its destination. A mesh network can relay data via “flooding” (broadcasting data so that it is received by all nodes within direct wireless range). It can also use predefined routes, in which case the network must plan for uninterrupted connections or alternative routes.

Wirepas Mesh

The Wirepas Mesh protocol is a wireless network protocol that uses a multi-jump, self-organizing, and decentralized design. Decentralized network topology enables extremely dense network deployment.

Wirepas focuses on providing a connectivity solution that is highly **reliable, optimized, scalable, and easy to deploy**.

This solution was specifically designed to meet two major challenges facing wireless mesh networks: network reliability regardless of its size and density; and low energy consumption by router devices in the network.

Information about Wirepas Mesh technology is available here:

www.wirepas.com

2 BLUE ID MESH BEACONS

BLUE ID MESH BEACONS



Blue LITE ID+ MESH



Blue SLIM ID+ MESH



Blue COIN ID+ MESH




Aero ID+ MESH



Blue PUCK ID+ MESH



Blue PUCK BUZZ+ MESH

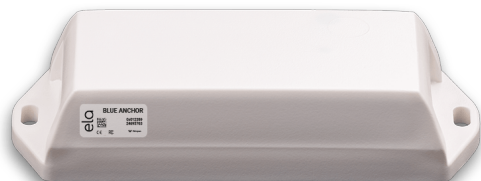

Blue ANCHOR

3 BLUE ID MESH GATEWAY

Raspberry Pi Gateway and Wirepas Mesh Wireless Dongle (2.4 GHz)



Raspberry Pi3 B+ or Pi4



Wirepas Mesh 2.4 GHz wireless dongle


SolidRun Gateway






SolidSense N6

4 BLUE ID MESH OPERATION

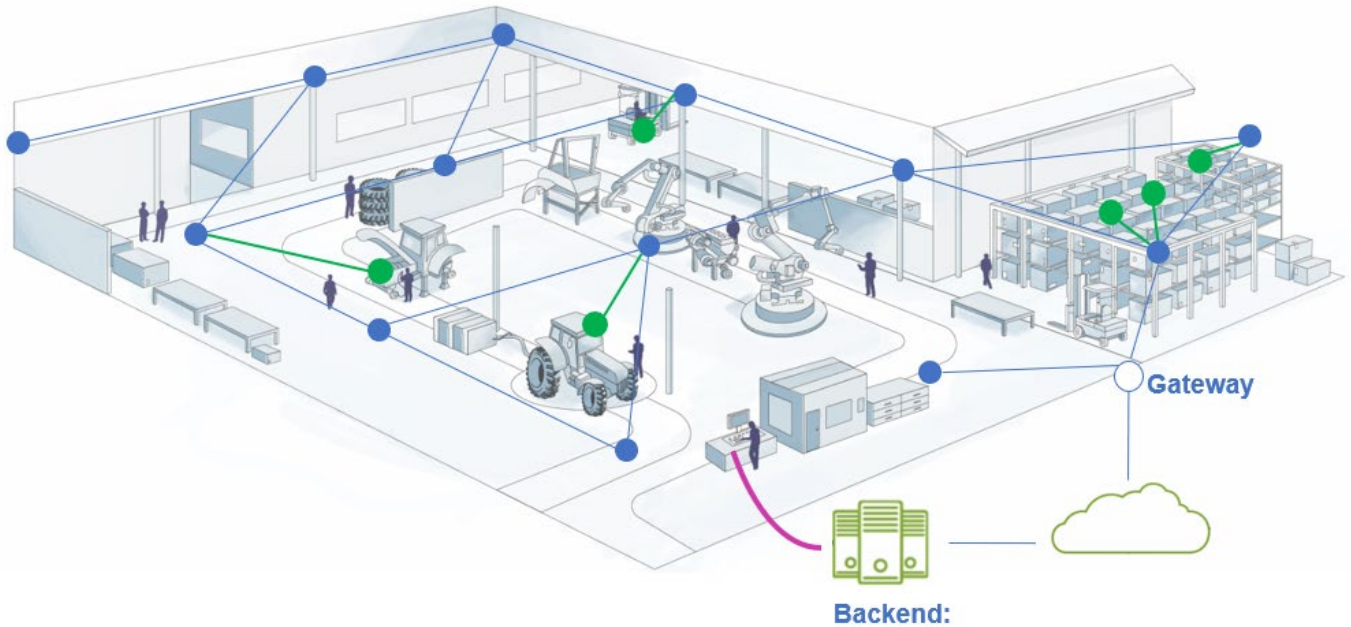Location network diagram



| Network components | Products |
|--|-----------------------------------|
|  ANCHOR | BLUE PUCK ID MESH / Blue ANCHOR |
|  MOBILE Beacon | BLUE PUCK/COIN/SLIM/LITE ID+ MESH |
|  GATEWAY | ELA Innovation MESH Gateway |

The mesh network comprises three different types of devices: anchors, mobile beacons, and one or more gateways. Each device can be added to an existing network to extend the covered surface area, increase location accuracy, or reinforce coverage in difficult zones. Adding new devices to an existing network is made easier with automatic connection and integration into the mesh network.

ANCHOR

BLUE PUCK and BLUE ANCHOR are anchor devices, tags with a defined and fixed position in the Wirepas mesh network. Anchors have two main functions:

- Anchors are fixed points that serve as reference points for the location application. The anchors' predefined locations enable the application to accurately position mobile beacons on a map.
- Anchors forward information to a gateway. Mobile beacons relay location information to the closest anchors. The anchors then transmit the information to the gateway.

MOBILE Beacon

Mobile beacons are localized tags for the configured period. The main purpose of mobile beacon models BLUE PUCK, COIN, LITE, SLIM, and WATCH is to send information regarding their position.

GATEWAY

A software gateway links the BLUE Mesh tag network and server. The gateway receives a stream of data sent by anchors and forwards it to an MQTT broker. The data is then processed by a centralized location agent in order to be able to display mobile beacon locations in an application.

5 MOBILE BEACON OPERATING MODES

Mobile beacons have two operating modes for location. A mobile beacon can either be in Mobile or Mobile+ NRLS (Non-Router long sleep) Tag mode with longer lifespan thanks to the use of periodic extended sleep functionality; or Mobile HC (High Consumption in Autoscan Tag mode) without a sleep phase or disconnection from the network, offering a much shorter lifespan.

A- Long-life Mobile or Mobile+ Beacon – NRLS Tag (Non Router Long Sleep)

In this mode, the mobile beacon remains in standby mode and only wakes up at the configured moment to scan for location and send its data to the nearest anchors. Location data is sent to MQTT topic 238.

This mode extends the tag's operating lifespan. During standby, the mobile beacon is disconnected from the network. It does not provide any diagnostic information and cannot receive commands via the network, such as to turn on its LED or activate its buzzer.

To further increase the lifespan of mobile beacons, some models contain an accelerometer that can bring the beacon out of standby mode when movement is detected, or to prolong standby if there is no movement. When movement is detected, the tag exits standby mode and immediately runs a location scan. This functionality is available on all "ID+" models in the Blue Mesh location product line

Description of ID+ functionality in Mobile+ Role

ID+ functionality in BLUE PUCK ID+ MESH, BLUE COIN ID+ MESH, BLUE SLIM ID+ MESH, BLUE LITE ID+ MESH, and BLUE WATCH ID+ MESH products enable you to define two data transmission periods via NFC configuration in Mobile+ Role. Configuring these two periods in Mobile+ Role automatically activates ID+ functionality. The switch between the two periods occurs when movement is detected or over an extended period of immobility.

- Movement detected → immediate update of location, and upon the period defined for Fast Period.
- Absence of movement → update of location upon the period defined for Slow Period.

This functionality is deactivated if Fast Period is equal to Slow Period in Mobile Role. In that case, the threshold parameter used by the accelerometer is not taken into account and ID+ functionality is not activated.

An ID+ movement detection frame is sent to MQTT Endpoint 160 with immediate update of location.

| Functionality | Endpoint source/destination | Data | | | Results | |
|---------------|-----------------------------|------|--------|-------------------|-------------------|---|
| | | Type | Length | Received data | Interpreted data | Value |
| ID+ | 160/ 160 | 08 | 06 | 01 00 B6 00 00 00 | 00 01 00 00 00 B6 | Movement present: 01 |
| | | | | 00 00 B6 00 00 00 | 00 00 00 00 00 B6 | Movement absent: 00 MOV counter: 182 |

Usage example:

Fast Period = 60 seconds → 1 minute

Slow Period = 7200 seconds → 2 hours

Threshold: 500 milliG (adjustable by the user based on the application scenario).

- If the tag moves: location data is sent immediately and 1 minute later just once.
- If the tag moves constantly over a period of 4 hours: location data is sent every minute.
- If the tag does not move within a period of 1 minute: location data is sent every 2 hours periodically.

This functionality enables you to manage and optimize mobile beacon lifespan by modifying these two transmission periods in case movement is detected, or to receive less location data to process.

When using this functionality, you should take into account the original factory settings and usage recommendations in order to avoid impacting mobile beacon lifespan.

B- Fast response Mobile HC Beacon – High Consumption Autoscan Tag

In this role (Mobile HC), the mobile beacon is connected continuously to the network without ever switching to standby mode. The beacon runs a location scan upon the configured period and does not go to sleep between location phases. Location data is sent to MQTT topic 238. Diagnostic information is sent periodically.

This means that mobile beacons can receive commands and instructions at any time. The trade-off is that lifespan is much shorter. This mode is not recommended for mobile beacons running on batteries with faster location. It is more suitable for beacons with an external power supply or for slower location.

Important information

In this role, Mobile beacon is already connected to a Mesh Network. An anchor (Router) can have maximum of 14 nodes attached to them. Also in this configuration, a Mesh Network with Mobile beacon in *Mobile HC* role needs more anchors than Mesh Network with Mobile beacon in *Mobile* or *Mobile+* role (NRLS Tag).

6 CONFIGURATION VIA NFC

A. **Connect NFC reader** to PC (ELA reference: NFC R/W 01 - ref. ACIOM177).



B. Start the **Device Manager** application (installed prior to use).


The application can be downloaded from the elainnovation.com website, in Support → Downloads



C. Launch the **NFC widget**.



D. Click on the button to select the proposed **NFC reader**.

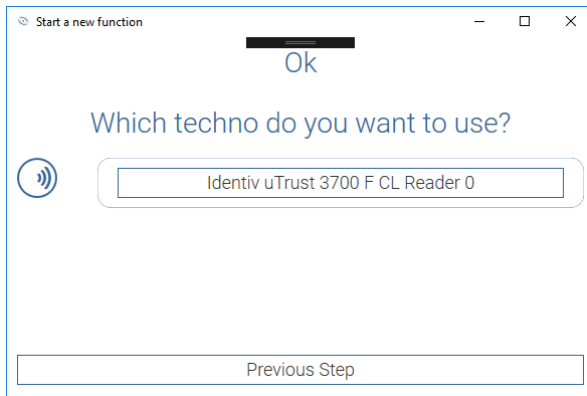


E. **Place** the tag on the NFC reader as shown below.



F. Click on the **Configuration**

icon to read tag parameters.

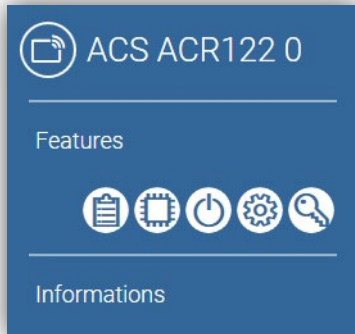

Display raw configuration data.



NFC memory information.



Write configuration operation locked.




Display configuration data.



Activate / deactivate Tag.

G. Configuration: example of parameters read

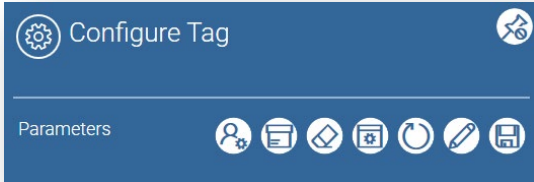

Read parameters.



Write parameters.



Clear the entire configuration (attention, automatically writes default parameters).




Display Wirepas network fields in hexadecimal or decimal format.



Display all configuration parameters, including limits.




Factory settings (default parameters).

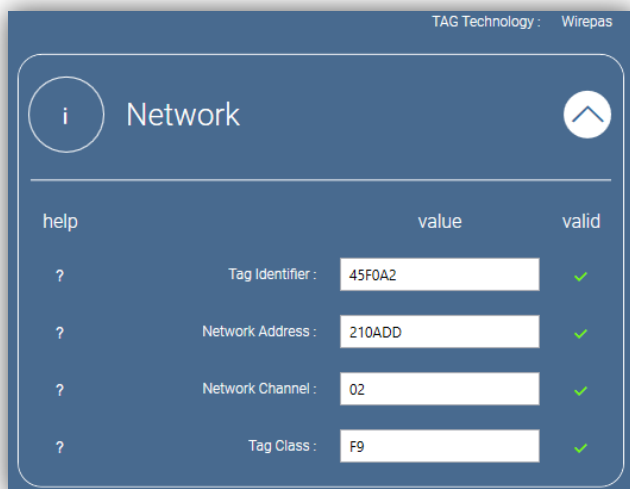

Save configuration.

Specifications subject to change without notice. Non-contractual document.


| Parameters | Description | Default values |
|-----------------|---|-------------------------|
| Tag identifier | Unique Tag identifier (24 bits, modifiable) | Assigned at tag startup |
| Network Address | Wirepas Network Address (24 bits) | 0x210ADD |
| Network Channel | Wirepas Network Channel (8 bits) | 0x02 |
| Tag Class | Tag group management (8 bits) [0xF9-0xFF] | 0xF9 |

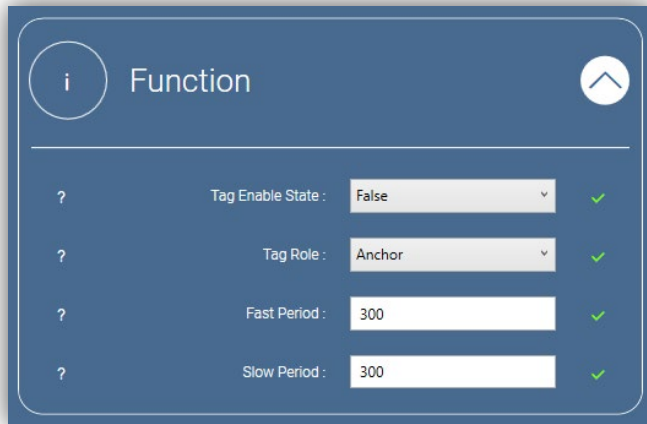

| Parameters | Description | Default values |
|------------------|---|---------------------|
| Tag Enable State | Tag activation and deactivation: True/False | False: Deactivation |
| Tag Role | Tag role in Wirepas network: ¹ Anchor: Anchor with location function Mobile: Long-life mobile beacon with location function Mobile+: Long-life mobile beacon with ID+ location function Mobile HC: Mobile beacon, fast response with location function Sensor: Automatic management of sensor function role | Anchor |
| Fast Period | Period for sending location and/or sensor data (*Fast used in ID+) | 300 |
| Slow Period | Period for sending location and/or sensor data (*Slow used in ID+) | 300 |


* Fast Period and Slow Period are different than when using ID+ functionality reserved for Mobile Beacons in “Mobile+” Tag role. For all other roles, Fast Period and Slow Period must be equal. See Chapter 5 for more information. If these periods are not equal, the beacon will automatically rewrite the same value in Fast and Slow Period by the value entered in Slow Period.

¹ The Tag Roles available depend on the Firmware version. A complete list of the roles available for each version can be found in the annex of this document.

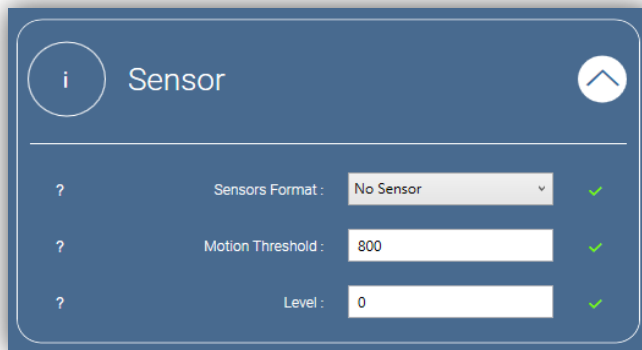

| Parameters | Description | Default values |
|------------------|--|--------------------|
| Sensors format | Choice of format associated with sensor reading if tag is equipped: [No Sensor – T – RHT – MAG – MOV – ANG – AI – Digi IN – Digi OUT – AT – PIR – Touch] | No sensor* |
| Motion Threshold | Acceleration limit in milliG [32 – 8000] Used by ID+ location function and by MOV sensor function. | 1000 milliG |
| Level | 4 level used only for PIR Sensor, Sensibility of presence detection. | 0 (Less sensitive) |

* An Anchor or Mobile Beacon used in location application and not equipped with a sensor must have Sensor Format set to “No sensor”.

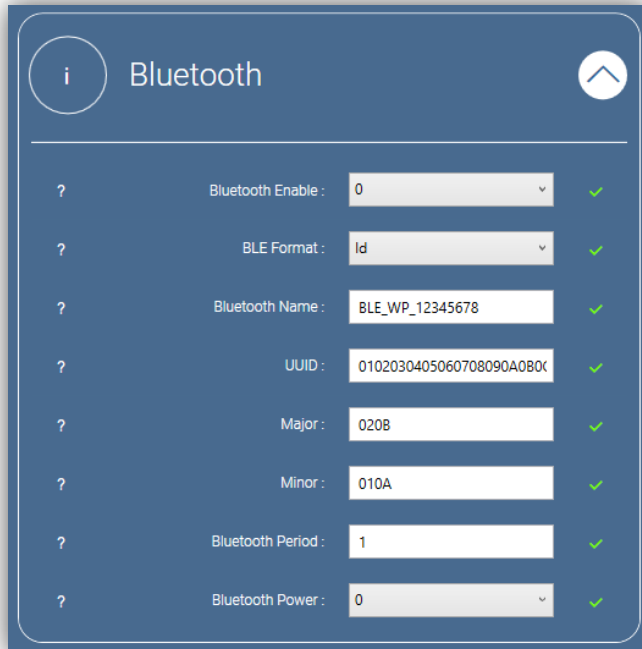

| Parameters | Description | Default values |
|------------------------|---|----------------------------------|
| Bluetooth Enable | 0: BLE frame deactivated. 1: BLE frame activated. 2: BLE frame activated when tags are offline (disconnected from mesh network) | 0 |
| BLE Format | Id: Advertising with Bluetooth Name. iBeacon: Advertising in Apple format with UUID – Major – Minor information. | Id |
| Bluetooth Name | 15 Characters maximum. | BLE_WP_12345678 |
| UUID (iBeacon format) | 16 bytes in hexadecimal value | 0102030405060708090A0B0C0D0E0F10 |
| Major (iBeacon format) | 2 bytes in hexadecimal value | 020B |
| Minor (iBeacon format) | 2 bytes in hexadecimal value | 010A |
| Bluetooth period | Advertising period in seconds [1 to 10] | 1 |
| Bluetooth power | Power [-8, -4, 0, 4] | 0 |

H. Versions

| ELA Firmware | WIREPAS Stack | Positioning Application | WIREPAS stack version compatibility | GATEWAY |
|----------------------|---------------|-------------------------|-------------------------------------|---------|
| v0.0.6 | v3.4.47 | v3.40 | Incompatible with 4.x.x versions | v1.1.0 |
| v1.0.0 | v4.0.50 | v4.0.0 | Compatible with all 4.x.x versions | v1.3.0 |
| v1.0.3 | v4.0.70 | v4.0.0 | Compatible with all 4.x.x versions | v1.3.0 |
| v2.0.0 | v4.0.70 | v4.0.1 | Compatible with all 4.x.x versions | v1.3.0 |
| v2.1.0 | v4.0.70 | v4.0.1 | Compatible with all 4.x.x versions | v1.3.0 |
| v2.1.1 | v4.0.70 | v4.0.1 | Compatible with all 4.x.x versions | v1.3.0 |
| v2.2.0 | v4.0.70 | v4.0.1 | Compatible with all 4.x.x versions | v1.3.0 |
| v2.2.1 | v4.0.70 | v4.0.1 | Compatible with all 4.x.x versions | v1.3.0 |
| v2.2.2 (PIR only) | v4.0.70 | v4.0.1 | Compatible with all 4.x.x versions | v1.3.0 |

The latest version (at the time of this writing) is v2.2.2.

There is no incompatibility between the gateway version and the firmware version in tags on the network. The software environment for the Wirepas gateway evolves according to customer requests as well as general bug fixes and improvements.

Details regarding parameters for other versions are available in the Annex of this document.

7 COMMANDS VIA THE NETWORK: APPLICATION CONFIGURATION DATA

Command syntax:

[Class] [Type] [Length] [Value]

→ to send multiple commands at once the syntax is as follows:

[Class] [Type₁] [Length₁] [Value₁] [Type₂] [Length₂] [Value₂] ... [Type_N] [Length_N] [Value_N]

Command field details:

[Class]: This parameter enables you to differentiate and address tag groups.

Sent commands are addressed to one or more Classes. It is important to know the tag class when sending commands.

[Type]: The type identifies the chosen functionality or parameter to modify.

** see complete list on next page.*

[Length]: Data size (length).

[Value]: Value to be updated or activation / deactivation data.

** If "Length" is greater than 1, the value must be written with the least significant byte first.*

Information and good practices

- The application configuration data can be up to 80 bytes.
- The class indicated in the following tables is provided as an example. You must enter the class corresponding to your tags when sending commands. Possible values are from 0xF9 to 0xFF.
- The identifier 0x00FA1221 indicated in the following tables is provided as an example. You must enter the identifier for your tag for an individual command addressed to a tag. For a general command addressed to all tags, simply replace the identifier with 0x00000000.
- When [Value] is larger than 1 byte, bytes must be in order with the least significant byte first (little endian).
- A sent command is persistent in the network. Each tag in the network receives this command, and each new tag entering the network also receives the command.
- However, only one command is persistent in the network at a time. As soon as a new command is sent, the previous command is overwritten. A tag that has not yet received the previous command will therefore never receive. It is therefore important to wait a sufficient amount of time, when sending multiple commands in a row, to ensure for message propagation in the entire network. This is especially important in a network with tags in Mobile/Mobile+ mode (NRLS), because these tags only receive commands upon wakeup.

- A broadcast or unicast “ON” command to activate the LED and/or buzzer, either continuous or timed, must be followed by an “OFF” deactivation command of the same type to cancel that same command.
- If a tag is configured for Mobile Mode or Mobile+ “TAG NRLS” Long-life Mobile Beacon, it will receive the command and apply it upon wakeup. Its maximum standby time is equal to the configured data transmission period.
- No information is returned by tags in the network to know whether the command was properly received. You must calculate and wait the necessary time to be sure that all your tags receive the command.
- The commands available and examples are presented in the table below:

Configuration commands

| Command | Class | Type | Length | Identifier | Data *example | Information |
|--------------------|-------|------|--------|------------|---------------|---|
| Fast Period | 0xF9 | 0x10 | 0x08 | 0x2112FA00 | 0x20FD0000 | [0x01 – 0xFD20] from 1 to 64800 seconds |
| Slow Period | 0xF9 | 0x12 | 0x08 | 0x2112FA00 | 0x20FD0000 | [0x01 – 0xFD20] from 1 to 64800 seconds |
| Acceleration limit | 0xF9 | 0x14 | 0x08 | 0x2112FA00 | 0x401F0000 | [0x20 – 0x1F40] from 32 to 8000 milliG |
| Activate BLE | 0xF9 | 0x16 | 0x08 | 0x2112FA00 | 0x01000000 | [0x00 – 0x02] OFF – ON – Specific ON |
| BLE period | 0xF9 | 0x18 | 0x08 | 0x2112FA00 | 0x01000000 | [0x01 – 0x0A] From 1 to 10 seconds |
| BLE power | 0xF9 | 0x20 | 0x08 | 0x2112FA00 | 0x01000000 | [0x01 – 0x04] -8, -4, 0, +4 dBm |
| Deactivate tag | 0xF9 | 0x91 | 0x08 | 0x2112FA00 | 0x01000000 | Reactivate only via NFC |

Diagnostic commands

| Command | Class | Type | Length | Identifier | Data *example | Information |
|------------------|-------|------|--------|------------|---------------|--|
| Sequence Number | 0xF9 | 0xA0 | 0x08 | 0x2112FA00 | 0x01000000 | Returns the value of “Sequence Number” |
| Hardware version | 0xF9 | 0xA1 | 0x08 | 0x2112FA00 | 0x01000000 | Returns hardware version |
| Firmware version | 0xF9 | 0xA2 | 0x08 | 0x2112FA00 | 0x01000000 | Returns firmware version |
| Battery level | 0xF9 | 0xA3 | 0x08 | 0x2112FA00 | 0x01000000 | Returns the battery level |

LED and buzzer activation commands

| Command | Class | Type | Length | Identifier | Data *example | Information |
|--------------|-------|------|--------|------------|---------------|--|
| LED | 0xF9 | 0xE0 | 0x08 | 0x2112FA00 | 0x01000000 | LED activation / deactivation |
| BUZZER | 0xF9 | 0xE1 | 0x08 | 0x2112FA00 | 0x01000000 | BUZZER activation / deactivation |
| LED & BUZZER | 0xF9 | 0xE2 | 0x08 | 0x2112FA00 | 0x01000000 | LED & BUZZER activation / deactivation |

Data:

1st byte: 01 → Activation – 00 → Deactivation

2nd byte and 3rd byte: 0000 for infinite period.

May be replaced by a value to activate for a few seconds or minutes, for example:

C8 00 → Activation for **200** seconds (0x00C8) (little endian)

10 0E → Activation for **3600** seconds (0x0E10) (little endian)

4th byte: Not used.

Commands described here correspond to version v2.0.0 and above. Commands for versions previous are provided in the Annex of this document.

Examples:

In the following some examples are provided to demonstrate the functionality:

- Deactivate LEDs of an entire class (0xF9):

```
F9 E0 08 00 00 00 00 00 00 00 00
```

- Activate the LED of a tag with ID 16388641 (=0xFA1221) in class 0xF9 for 30 s (=0x1E):

```
F9 E0 08 21 12 FA 00 01 1E 00 00
```

- Multi command: Change Fast Period to 12s (=0x0C) and Slow Period to 3600s (0x0E10) for class 0xFB:

```
FB 10 08 00 00 00 00 0C 00 00 00 12 08 00 00 00 00 10 0E 00 00
```

Sending a command via the Wirepas Network Tool Client

- Open the **Settings** menu and select the **Network** tab.
- Choose your network.
- Enter the command in the “Application Data” field and then click on “Apply network data”.

NETWORK ID

2361120 0x00 24 07 20 HEX

NETWORK NAME

Réseau ELA Localisation & Capteur Save

APPLICATION CONFIGURATION TYPE

Set for network Override if changed outside of WNT

SINKS

| NETWORK | ADDRESS | OVERRIDE | DIAGNOSTICS INTERVAL | LAST RESULT OF SETTING ACTION | |
|---------------------------|---------------|----------|----------------------|-------------------------------|----------------------------------|
| Réseau ELA Localisatio... | 0x00 00 00 01 | False | 300 s | OK | 00000000000000000000000000000000 |
| Réseau ELA Localisatio... | 0x00 00 00 02 | False | 300 s | OK | 00000000000000000000000000000000 |

DIAGNOSTICS INTERVAL

300

APPLICATION DATA

F9E0082112FA0001000000

Apply network data

Delete nodes and network

The command sent above activates the LED on a tag whose identifier is 0x00FA1221 (little endian), with a Class of 0xF9.

8 CONFIGURATION OVER THE NETWORK: MQTT TOPIC

These commands can only be used for devices that are always connected to the network (Anchor, Mobile HC and Sensor). Mobile beacons in NURLS mode (Mobile or Mobile+) cannot receive these commands due to the network disconnection during their sleep phase between two measurement updates.

LED and buzzer activation commands

| Functionality | Product | Endpoint source | Endpoint destination | Description | |
|---|---|-----------------|----------------------|------------------------------|-------------------|
| | | | | Command | ACK |
| LED ON | BLUE PUCK ID MESH BLUE PUCK BUZZ MESH BLUE COIN ID MESH | 20 | 20 | LED_ON | OK: 00 NOK: 01 |
| LED OFF | BLUE ANCHOR | 20 | 20 | LED_OFF | OK: 00 NOK: 01 |
| LED ON Time * "Time" in seconds | | 20 | 20 | LED_ON 10 *10 seconds | OK: 00 NOK: 01 |
| BUZZ ON | BLUE PUCK BUZZ MESH | 20 | 20 | BUZZ_ON | OK: 00 NOK: 01 |
| BUZZ OFF | | 20 | 20 | BUZZ_OFF | OK: 00 NOK: 01 |
| BUZZ ON Time * "Time" in seconds | | 20 | 20 | BUZZ_ON 10 *10 seconds | OK: 00 NOK: 01 |
| LEDBUZZ ON | BLUE PUCK BUZZ MESH | 20 | 20 | LEDBUZZ_ON | OK: 00 NOK: 01 |
| LEDBUZZ OFF | | 20 | 20 | LEDBUZZ_OFF | OK: 00 NOK: 01 |
| LEDBUZZ ON Time * "Time" in seconds | | 20 | 20 | LEDBUZZ_ON 10 *10 seconds | OK: 00 NOK: 01 |

Diagnostic commands

| Functionality | Product | Endpoint source | Endpoint destination | Description | |
|------------------|---|-----------------|----------------------|------------------|---|
| | | | | Command | Information |
| Battery level | BLUE PUCK ID MESH BLUE PUCK BUZZ MESH BLUE COIN ID MESH | 50 | 50 | GET_BATT_VOLTAGE | Returns the battery level |
| Hardware version | BLUE ANCHOR | 50 | 50 | HW_VERS | Returns hardware version |
| Firmware version | | 50 | 50 | FW_VERS | Returns firmware version |
| Sequence Number | | 50 | 50 | SCRATCHPAD_INFO | Returns the value of the scratchpad sequence number |

Response diagnostic commands


| Functionality | Topic | Data | | | Results | |
|------------------|-------|------|--------|-------------------|----------------------------|--|
| | | Type | Length | Received data | Interpreted data | Value |
| Battery level | 11 | 01 | 02 | BD 0B | 0x0BBD | 3.005 v |
| Hardware version | 50 | - | - | 13 05 24 10 | 0x10240513 | (used for internal diagnostics) |
| Firmware version | 50 | - | - | 02 00 40 70 04 01 | 0x0200 0x4070 0x0401 | FW version 200 Stack version 4.0.70 PosApp version 4.0.1 |
| Sequence Number | 50 | - | - | 03 00 01 00 | 0x00 03 0x00 01 | Scratchpad sequence number: 3 Processed scratchpad sequence number: 1 |

9 VIEWING TOOLS

Wirepas Network Tool (WNT)

- Run the provided **WNT** software installation tool.
- Run the **WNT** application.
- Fill in the field "**LOGIN SERVER ADDRESS**" with your "login server" provided with your kit. This information corresponds to your "instance".

Example: **wss://yourcompanywpewnt.extwirepas.com:8813**

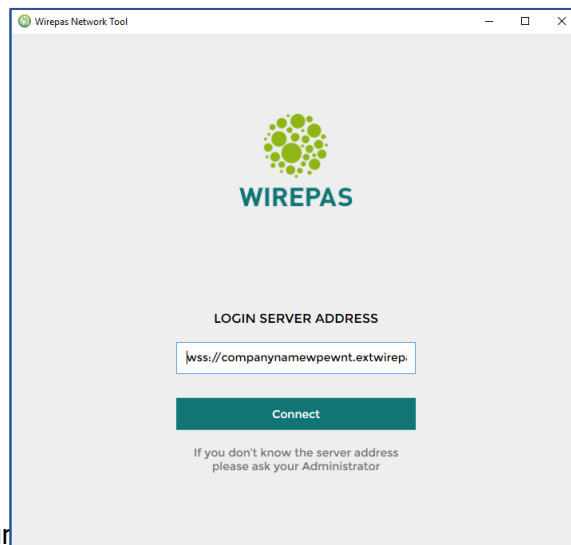


- Enter your **LOGIN SERVER ADDRESS** in the input field and click on **Log in**.

This application enables you to monitor your network(s), view specific data for your objects and to view your locatable objects.


For more information about using the Wirepas Network Tool application, please see the user guide available upon request from Wirepas Support.

WP-UG-421 - Wirepas Network Tool - Client User Guide


10 HARDWARE SPECIFICATIONS

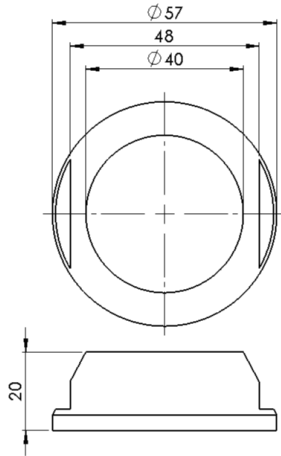


• PUCK module

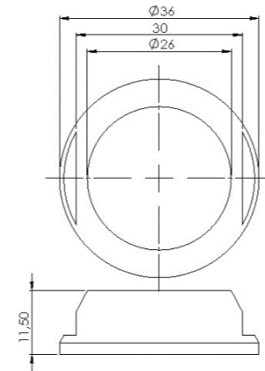

• COIN module

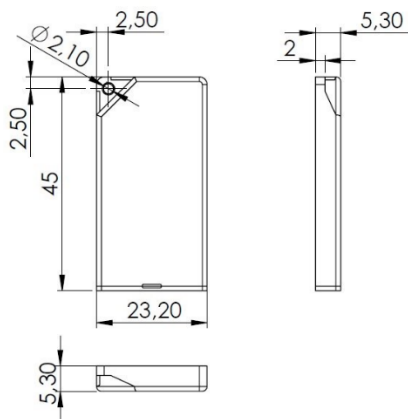

• LITE module

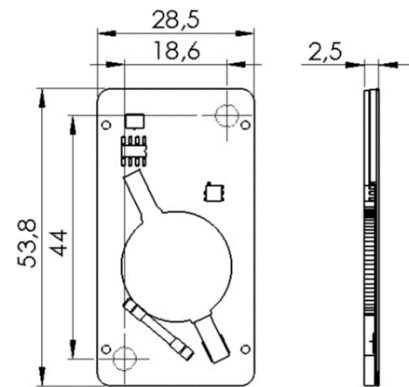

• SLIM module

11 SALES REFERENCES

| <i>DESCRIPTION</i> | <i>PRODUCT REFERENCE</i> | <i>DESCRIPTION</i> |
|-----------------------------|--------------------------|--------------------------------|
| Blue PUCK ID MESH | IDF25440X | ID MESH location tag |
| Blue PUCK ID+ MESH | IDF25451X | ID+ MESH location tag |
| Blue PUCK BUZZ MESH | IDF31445X | BUZZ MESH location tag |
| Blue PUCK BUZZ+ MESH | IDF25449X | BUZZ+ MESH location tag |
| Blue COIN ID MESH | IDF10440X | ID MESH location tag |
| Blue COIN ID+ MESH | IDF10451X | ID+ MESH location tag |
| Blue SLIM ID MESH | IDF03440X | ID MESH location tag |
| AERO ID+ MESH | IDF10651X | ID+ MESH location tag |
| Blue SLIM ID+ MESH | IDF03451X | ID+ MESH location tag |
| Blue LITE ID MESH | IDF28440X | ID MESH location tag |
| Blue LITE ID+ MESH | IDF28451 | ID+ MESH location tag |
| Blue ANCHOR | IDF32450X | ID MESH location tag |

12 STANDARDS AND CERTIFICATIONS

- CE logo



- FCC mark



- IC Mark



- RoHS certified



- Wirepas Mesh



13 ANNEX

The Annex provides a complete list of the Tag Roles available for the different Firmware version 2.x.x as well as the settings for BLUE MESH versions, and the LED and buzzer command set for versions prior to v2.0.0.

Tag Roles – v2.x.x

| v2.0.0 | v2.1.0/ v2.1.1 | v2.2.0/ v2.2.1/ v2.2.2 |
|----------|----------------|---------------------------|
| ANCHOR | Anchor | Anchor |
| TAG NRLS | Mobile | Mobile |
| - | Mobile+ (new) | Mobile+ |
| TAG AS | Mobile HC | Mobile AS |
| AUTOROLE | Sensor | Sensor AR |
| - | - | Sensor R (new) |
| - | - | Sensor NR (new) |

Specifications subject to change without notice. Non-contractual document.

Parameters for version v1.0.3 – Wirepas stack 4.0.70

| Parameters | Restrictions | Default values | Description |
|--------------------------------|---|---------------------------------|--|
| Tag identifier | 6 characters (required): [0-9] [A-F] * hexadecimal value | 24-bit identifier Ex: 52A6F9 | Tag identifier in MESH network, user modifiable. |
| Tag activation | True/False | False | Tag activation / deactivation (storage mode) |
| Mode | NRLS tag: 1 * <i>Non-router Long Sleep</i> Autoscan tag: 2 Autoscan anchor: 3 Opportunistic anchor: 4 * decimal value | 3 | Tag mode in Wirepas network: <ul style="list-style-type: none"> - location function Anchor: 4 Mobile tag, NRLS: 1 - Sensor function Autoscan anchor: 3 - Sensor and location function Anchor: 4 Mobile tag, NRLS: 1 |
| Class | Possible values from 0xF9 to 0xFF * hexadecimal value | FA | Creation of tag groups Example: <ul style="list-style-type: none"> - PUCK: class 0xFA - COIN: class 0xFB - SLIM: class 0xFC |
| Node role | 0x01: Router 0x02: Non-router 0x41: Router with Autorole mode 0x42: Non-router with Autorole mode * hexadecimal value | 41 | Tag function in Wirepas network <ul style="list-style-type: none"> - location function Anchor: 01 Mobile tag: 02 - Sensor function Autorole: 41 |
| Network channel | 2 characters (required): [0-9] [A-F] * hexadecimal value | 04 | MESH network channel (8 bits) |
| Network address | 6 characters (required): [0-9] [A-F] * hexadecimal value | 123ADD | MESH network address (24 bits) |
| Minimum location period | Period of rapid location frame emission From 15 seconds to 64800 seconds (18 hrs.) | 300 (seconds) | Period of rapid tag position updates, in seconds: automatic change of slow/rapid period possible only with ID+ MESH models. |

Specifications subject to change without notice. Non-contractual document.

| | | | |
|----------------------------------|---|-----------------|---|
| Maximum location period | Period of slow location frame emission From 15 seconds to 64800 seconds (18 hrs.) | 300 (seconds) | Period of slow tag position updates, in seconds: automatic change of slow/rapid period possible only with ID+ MESH models. |
| Threshold | Possible values from 0001 to 07FF | 0050 | Threshold used by accelerometer when Min Period is different from Max Period. Min Period must always be less than Max Period. |
| BLE beacon name | BLE beacon tag name | BLUETAGID ELAWP | BLE tag name: 15 characters |
| BLE BEACON activation | Activation of BLE Beacon mode 0: deactivation, BLE BEACON OFF 1: activation, BLE BEACON ON 2: activation, BLE BEACON ON WHEN OFFLINE | 0 | Activation / Deactivation of BLE Beacon function 0: deactivation, BLE BEACON OFF 1: activation, BLE BEACON ON 2: activation, BLE BEACON ON WHEN OFFLINE, the BLE Advertising Beacon is activated only when the tag is in OFFLINE mode, that is, when the tag is activated but not connected to its mesh network. |
| BLE transmission interval | BLE Beacon advertising period | 1 (second) | BLE advertising period in seconds, range 1 to 10 |
| BLE power | BLE Beacon tag power: | 0 | BLE transmission power: [-8, -4, 0, 4] |
| Format | Tag format | ID | Available formats: ID – T – RHT – MAG – DI – DO - AT |
| location activation | True/False | False | Activation / deactivation of location function Anchors and mobile tags in a location network must have this parameter set to "True". This parameter must be set to "False" for a sensor network that does not use the location function. |

Specifications subject to change without notice. Non-contractual document.

Parameters for version v1.0.0 – Wirepas stack 4.0.50

| Parameters | Restrictions | Default values | Description |
|--------------------------------|--|---------------------------------|--|
| Tag identifier | 6 characters (required): [0-9] [A-F] * hexadecimal value | 24-bit identifier Ex: 52A6F9 | Tag identifier in MESH network, user modifiable. |
| Tag activation | True/False | False | Tag activation / deactivation (storage mode) |
| Class | Possible values from 0xF9 to 0xFF * hexadecimal value | FA | Creation of tag groups Example: - PUCK: class 0xFA - COIN: class 0xFB - SLIM: class 0xFC |
| Node role | 0x01: Router 0x02: Non-router Not used for location function: 0x41: Router with Autorole mode 0x42: Non-router with Autorole mode 0x11: Router with low latency mode 0x12: Non-router with low latency mode * hexadecimal value | 01 | Tag function in Wirepas network - location function Anchor: ROUTER, value 01 Mobile tag: NON-ROUTER, value 02 |
| Mode | NRLS tag: 1 * Non-Router Long Sleep Autoscan tag: 2 Autoscan anchor: 3 Opportunistic anchor: 4 * decimal value | 4 | Tag mode in Wirepas network: - location function Anchor: ROUTER, value 4 Mobile tag: NON-ROUTER, value 1 |
| Network channel | 2 characters (required): [0-9] [A-F] * hexadecimal value | 04 | Mesh network channel |
| Network address | 6 characters (required): [0-9] [A-F] * hexadecimal value | 001234 | Mesh network address |
| Minimum location period | Emission period of location frame From 15 seconds to 64500 seconds | 300 (seconds) | Required: The minimum period must be the same as the maximum period |
| Maximum location period | Emission period of location frame From 15 seconds to 64500 seconds | 300 (seconds) | Required: The minimum period must be the same as the maximum period |
| Threshold | Possible values from 0001 to 07FF | 0050 | Not used |
| BLE beacon name | BLE beacon tag name | BLUETAGID ELAWP | BLE tag name: 15 characters |
| BLE BEACON activation | Activation of BLE Beacon mode | 0 | Activation / Deactivation of BLE Beacon function |

Specifications subject to change without notice. Non-contractual document.

| | | | |
|----------------------------------|---|------------|--|
| | <p>0: deactivation, BLE BEACON OFF 1: activation, BLE BEACON ON 2: activation, BLE BEACON ON WHEN OFFLINE</p> | | <p>0: deactivation, BLE BEACON OFF 1: activation, BLE BEACON ON 2: activation, BLE BEACON ON WHEN OFFLINE, the BLE advertising beacon is activated only when the tag is in OFFLINE mode, that is, when the tag is activated but not connected to its mesh network.</p> <p>Not operational for this version Recommendation: do not activate this functionality</p> |
| BLE transmission interval | BLE Beacon advertising period | 1 (second) | BLE advertising period in seconds, range 1 to 10 |
| BLE power | BLE Beacon tag power: | 0 | BLE transmission power: [-8, -4, 0, 4] |

Specifications subject to change without notice. Non-contractual document.

Parameters for version v0.0.6 – Wirepas stack 3.4.47

| Parameters | Restrictions | Default values | Description |
|------------------------------|--|---------------------------------|--|
| Tag identifier | 6 characters (required): [0-9] [A-F] * hexadecimal value | 24-bit identifier Ex: 52A6F9 | Tag identifier in MESH network, user modifiable. |
| Tag activation | True/False | False | Tag activation / deactivation (storage mode) |
| Node role | 0x01: Router 0x02: Non-router Not used for location function: 0x41: Router with Autorole mode 0x42: Non-router with Autorole mode 0x11: Router with low latency mode 0x12: Non-router with low latency mode * hexadecimal value | 01 | Tag function in Wirepas network - location function Anchor: ROUTER, value 01 Mobile tag: NON-ROUTER, value 02 |
| Flag | 0x00: Low energy 0x40: Autorole 0x10: Latency mode * hexadecimal value | 40 | Tag function in Wirepas network |
| Network channel | 2 characters (required): [0-9] [A-F] * hexadecimal value | 04 | Mesh network channel |
| Network address | 6 characters (required): [0-9] [A-F] * hexadecimal value | 001234 | Mesh network address |
| Location function | True/False | True | Activation / deactivation of location function |
| Mode | NRLS tag: 1 * Non-Router Long Sleep Autoscan tag: 2 Autoscan anchor: 3 Opportunistic anchor: 4 * decimal value | 4 | location tag mode in Wirepas network - location function Anchor: ROUTER, value 4 Mobile tag: NON-ROUTER, value 1 |
| Location period | Emission period of location frame From 15 seconds to 1800 seconds | 300 (seconds) | Tag position update period in seconds |
| BLE BEACON activation | Activation of BLE Beacon mode True/False | False | Activation / Deactivation of BLE Beacon function Not operational for this version Recommendation: do not activate this functionality |
| BLE name | BLE beacon tag name | BLUE TAG ID WPE | BLE tag name: 15 characters |
| BLE power | BLE Beacon tag power | 0 | BLE transmission power: [-8, -4, 0, 4] |
| Transmission interval | BLE Beacon advertising period | 1000 (milliseconds) | BLE advertising period in milliseconds, range 100 to 10000 |

Specifications subject to change without notice. Non-contractual document.

Commands for Data Configuration Application version [v1.0.0 - v1.0.3]

Configuration commands

Not taken into account for NFC tag configuration and global commands addressed to all tags.

| Command | Class | Type | Length | Data | Example |
|-------------|-------|------|--------|--------|-----------------------------|
| Scan period | 0xF9 | 0x01 | 0x02 | 0x0258 | 0258 → 5802 = 600 seconds |
| Mode | 0xF9 | 0x02 | 0x01 | 0x01 | NRLS tag mode: 01 |
| Class | 0xF9 | 0x0A | 0x01 | 0xFB | Class changes from F9 to FB |

Global LED and buzzer activation commands (a.k.a. "Broadcast")

| Command | Class | Type | Length | Data | Information |
|--------------|-------|------|--------|------------|--|
| LED | 0xF9 | 0xE0 | 0x04 | 0x01000000 | The two bytes shown in red enable you to enter a time in seconds for LED and/or buzzer activation. 300 seconds: 0x012C0100 *Little endian |
| BUZZER | 0xF9 | 0xE1 | 0x04 | 0x01000000 | |
| LED & BUZZER | 0xF9 | 0xE2 | 0x04 | 0x01000000 | |

Individual LED and buzzer activation commands (a.k.a. "Unicast")

ID example → 0x1215FA

| Command | Class | Type | Length | Data | Information |
|--------------|-------|------|--------|--------------------|--|
| LED | 0xF9 | 0xE3 | 0x08 | 0x01FA151200000000 | The two bytes shown in red enable you to enter a time in seconds for LED/ buzzer activation. 300 seconds: 0x012C0100 *Little endian |
| BUZZER | 0xF9 | 0xE4 | 0x08 | 0x01FA151200000000 | |
| LED & BUZZER | 0xF9 | 0xE5 | 0x08 | 0x01FA151200000000 | |